




CABINET PARTS

For Models: LER8648PW0, LER8648PG0
(White/Grey) (Biscuit/Gold)

29" ELECTRIC DRYER

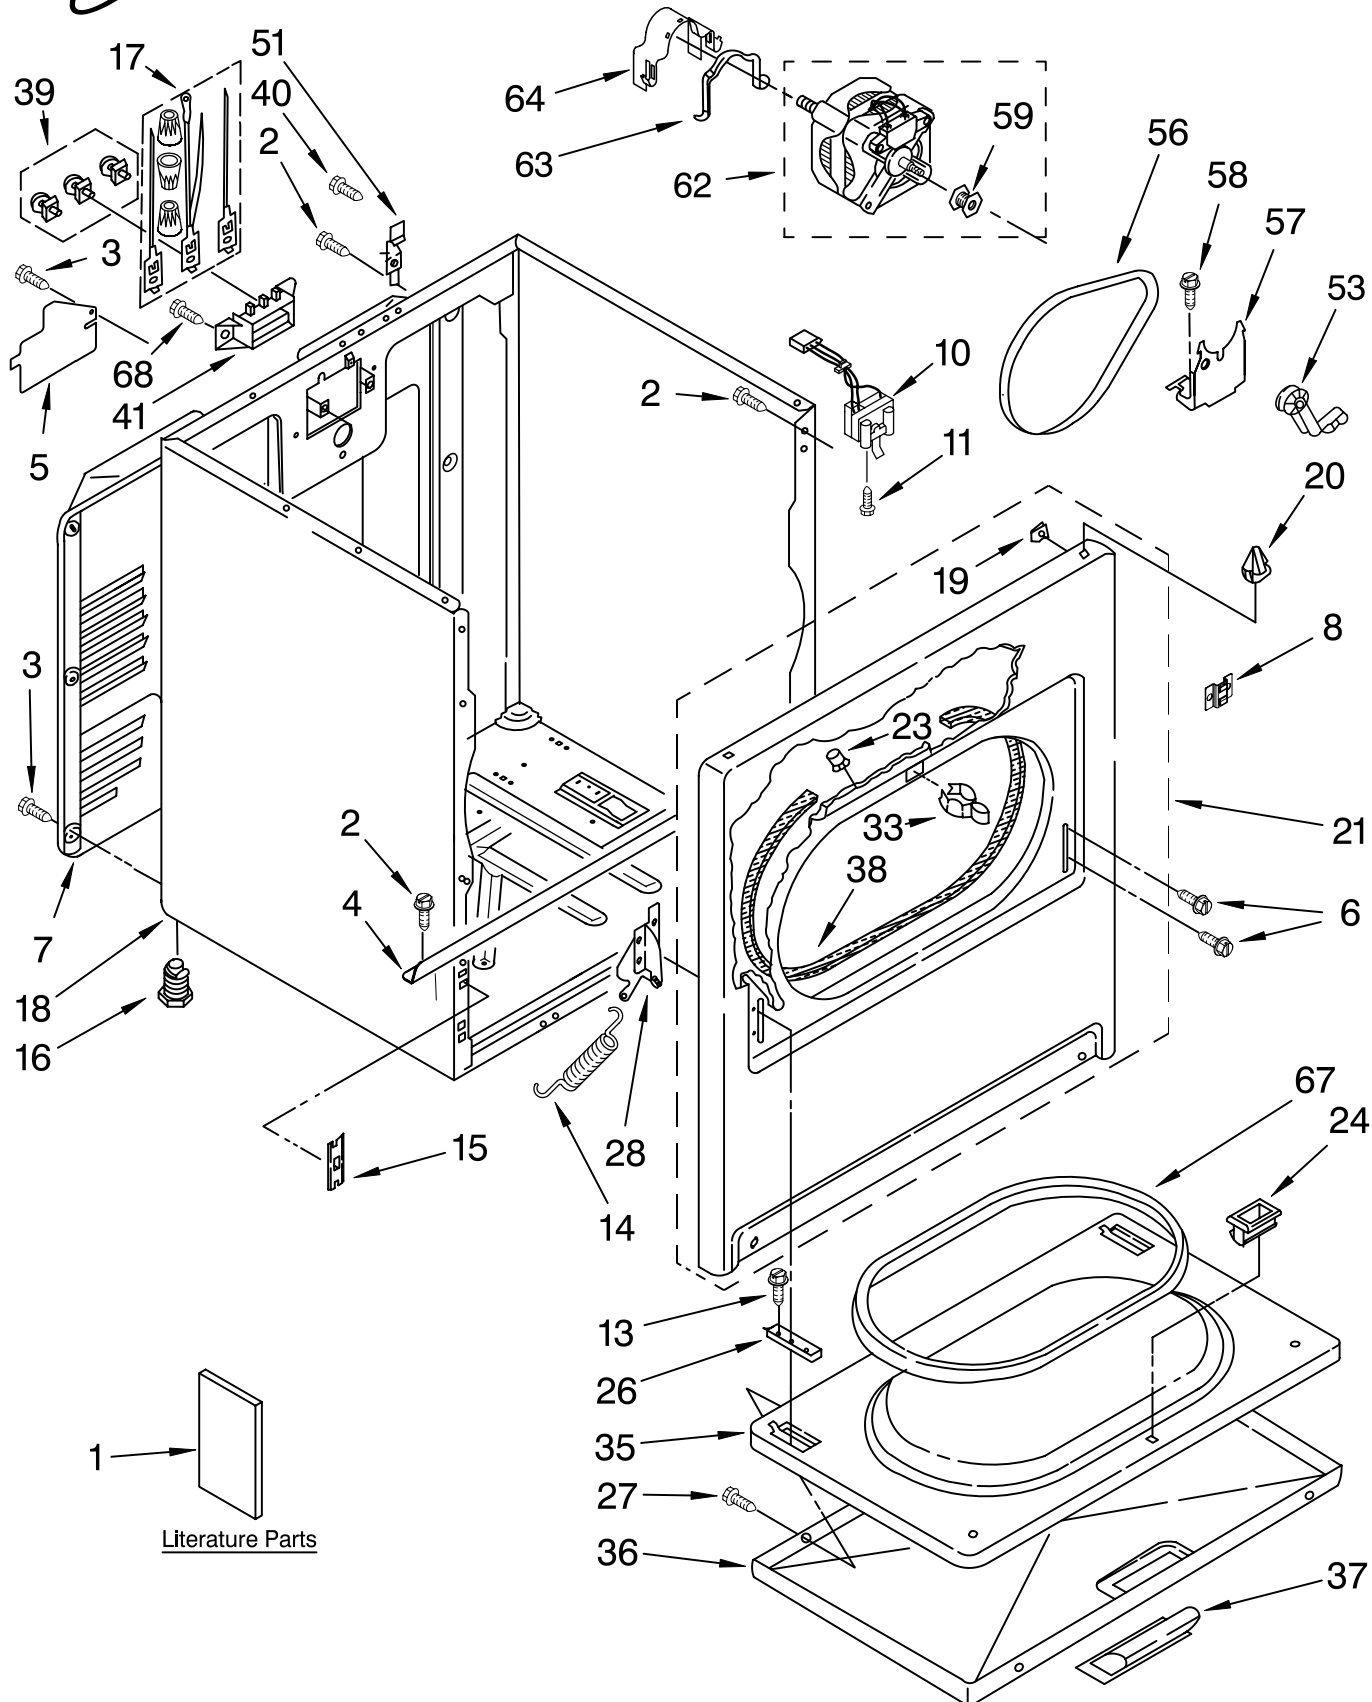

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS


For Models: LER8648PW0, LER8648PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	LIT8535829	Literature Parts Instructions, Installation	15	3394083	Clip, Front Panel (2)	35	695737	Door, Rear
	LIT8533770	Sheet, Cycle Feature	16	3392100	Foot, Dryer	36	3393549	Door, Front
	LIT8522243	Use & Care Guide		279810	Foot-Optional (Extended Length Package of 2) (Not Included)		3977241	White Biscuit
	LIT3979703	Wiring Diagram				37	690270	Handle, Door
Following May Be Purchased			17	279318	Terminal, Tinned & Brass (3) (Includes Illus. 39)		3977242	White Biscuit
DO-IT-YOURSELF REPAIR MANUALS			18		Terminal, Tinned & Brass (3) (Includes Illus. 39)	38	3406129	Seal & Bearing Assembly
	LIT677818	Dryer				39	279393	Terminal Block Kit (For Terminal Block)
2	343641	Screw, 10-16 x 1/2		8530603	White Biscuit	40	697776	Screw, 10-32 x 5/8
3	693995	Screw, 8-18 x 3/8		8530606	Biscuit	41	3397659	Block, Terminal
4	8541400	Bracket, Cabinet	19	98234	Clip, Ground	51	238088	Hinge, Top (2)
5	3396795	Cover, Block	20	690363	Lock, Front Top (2)	53	691366	Idler & Pulley Assembly
6	342043	Screw, 10-32 x 3/8	21		Panel, Front	56	8066065	Belt, Drive
7	3396805	Panel, Rear		695620	White Biscuit	57	348780	Base, Motor
8	8546676	Clip, Door Spring		3977244	Biscuit	58	3400500	Bolt, 5/16-18 x 3/4
10	3406107	Door Switch Assembly	23	685203	Clip, Felt Pad (3)	59	3394341	Pulley, 60 Hz.
11	697773	Screw, 6-20 x 7/8	24	3389441	Catch, Door Assembly	62	8538262	Motor Assembly 60 Hz.
13	3357011	Screw, 10-16 x 1/2	26	337189	Clip, Hinge (2)	63	660658	Clamp, Motor
14	8541401	Spring, Door (2)	27	694091	Screw, 8-18 x 3/8	64	3404162	Clamp, Motor (W/Shield)
			28	8066056	Hinge, R.H.	67	3390731	Seal, Door
				8066057	Hinge, L.H.	68	3393008	Screw, 10-16 x 1/2
			33	696144	Strike, Door			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: LER8648PW0, LER8648PG0
(White/Grey) (Biscuit/Gold)

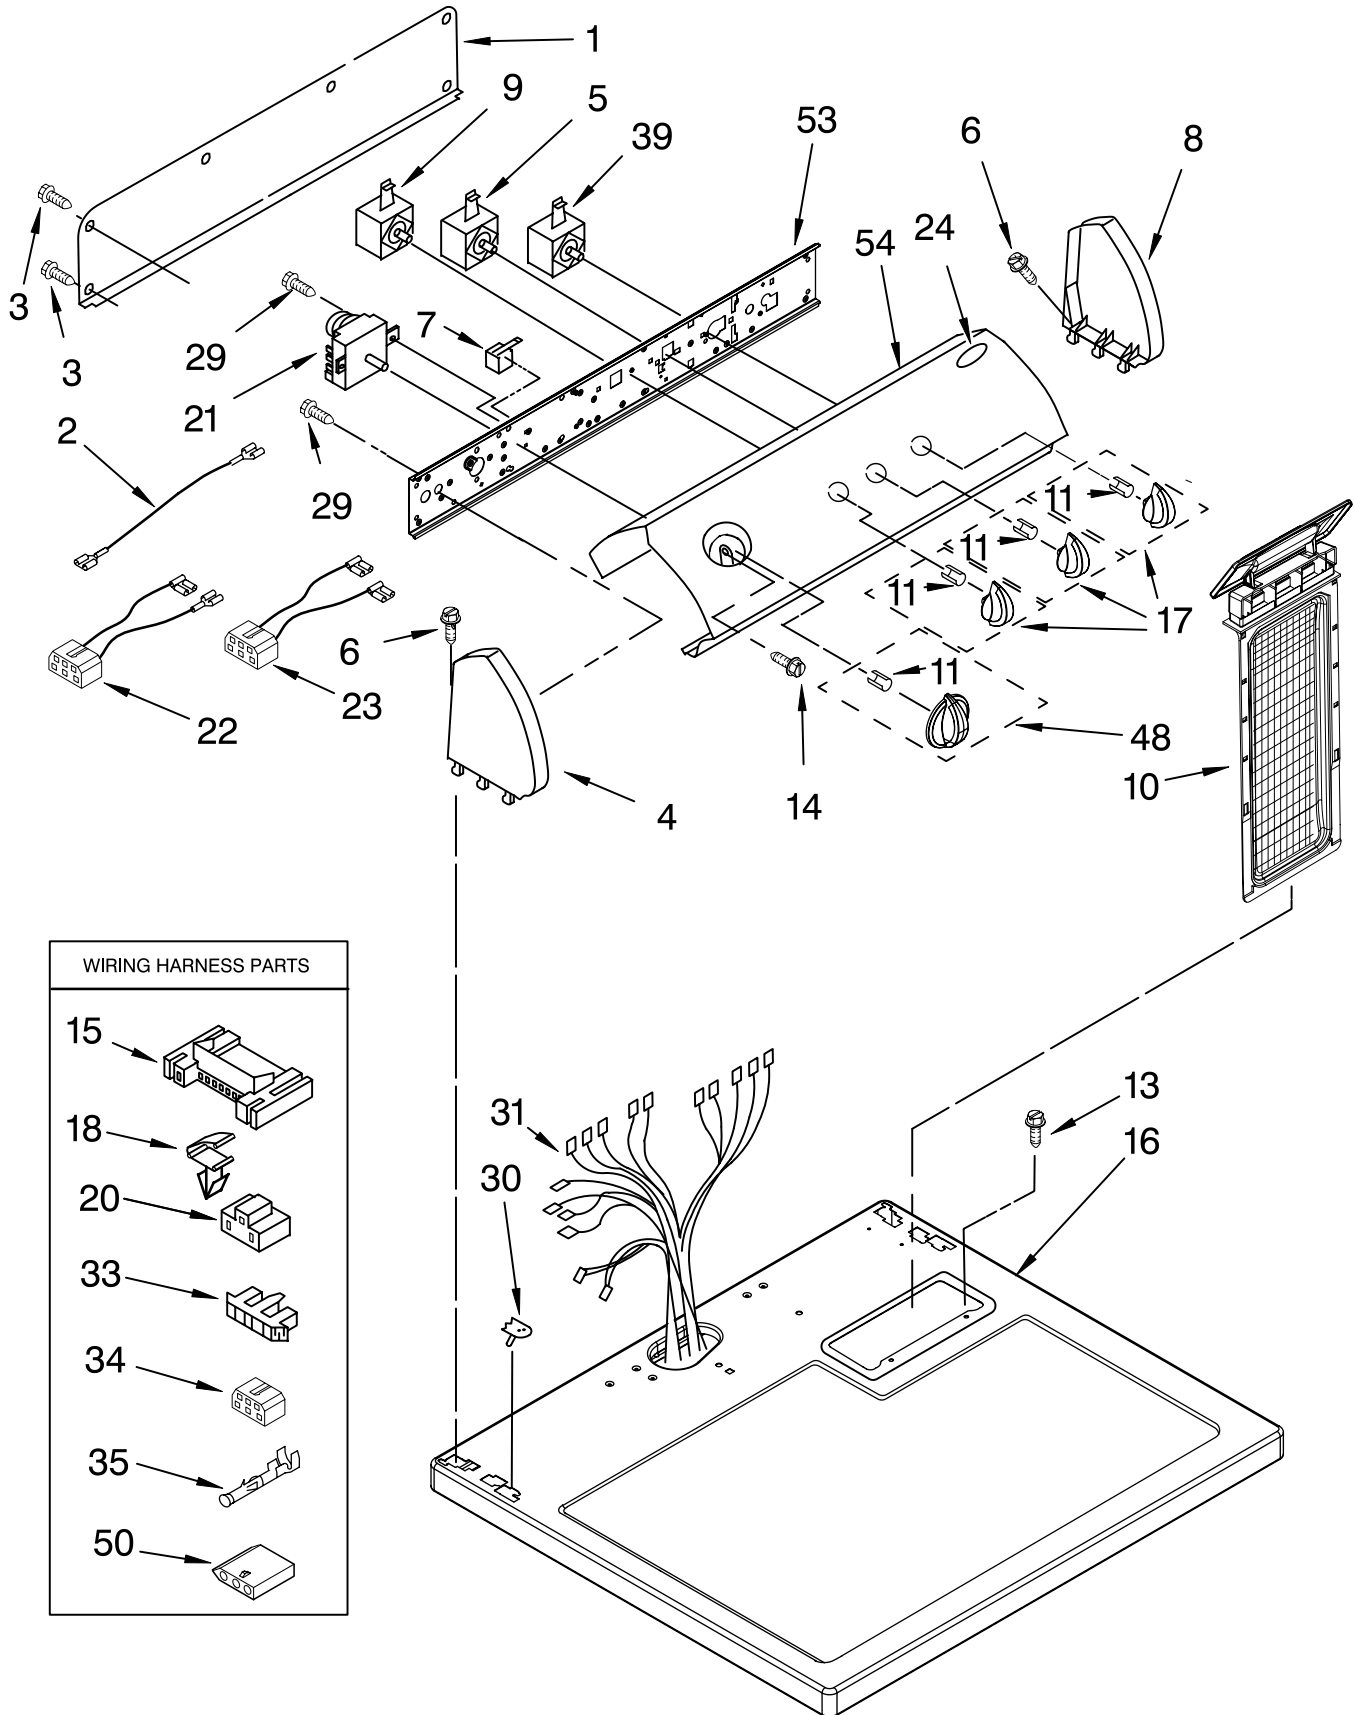

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: LER8648PW0, LER8648PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8274261	Panel, Rear Console	11	8536939	Clip, Spring	29	3390646	Screw, Mounting (8-18 x 5/16)
2	3401684	Wire, Jumper (Black)	13	688983	Screw, 8-18 x 5/8	30	357213	Nut, Push-In (2)
3	693995	Screw, Hex Head	14	3400859	Screw, Grounding	31	8299873	Harness, Wiring
4		Cap, End (L.H.)	15	3395683	Connector (Motor)	33	3397269	Connector (Timer)
	8271365	White	16		Top	34	3347243	Connector 6-Circuit
	8271368	Biscuit		8557930	White	35	94614	Terminal
5	3405156	Switch, Wrinkle Shield		8557931	Biscuit	39	3398095	Switch, Push-To-Start
6	388326	Screw, Console	17	8544937	Grey	48		Timer Knob Assembly
7	694419	Buzzer, Mini		8544938	Biscuit		8544957	Grey
8		Cap, End (R.H.)	18	3394427	Clip-Harness		8544958	Biscuit
	8271359	White	20	3401144	Connector, (PTS Relay)	50	3936144	Connector
	8271362	Biscuit	21	3979618	Timer, 60 Hz.	53	8544895	Bracket, Control
9	3399639	Switch, Temperature	22	3397695	Wire, Jumper (Guard On/Off)	54		Panel, Control (Includes Illus. 24)
10		Screen, Lint	23	3396029	Wire, Jumper (Temperature)		8545977	Grey
	8557857	White	24	3400985	Medallion		8545978	Gold
	8557858	Biscuit						

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

279948 Kit,
Dryer Repair
3406839 Dry Rack
8522199 Kit, Dryer
Vent Testing

PAINT, TOUCH-UP (1/2oz.)

72017 White
4392899 Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White
4392901 Biscuit
350938 Primer, Gray


PAINT, BULK (1 qt.)

799344 White (Uncut)
4392900 Biscuit(Uncut)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: LER8648PW0, LER8648PG0
(White/Grey) (Biscuit/Gold)

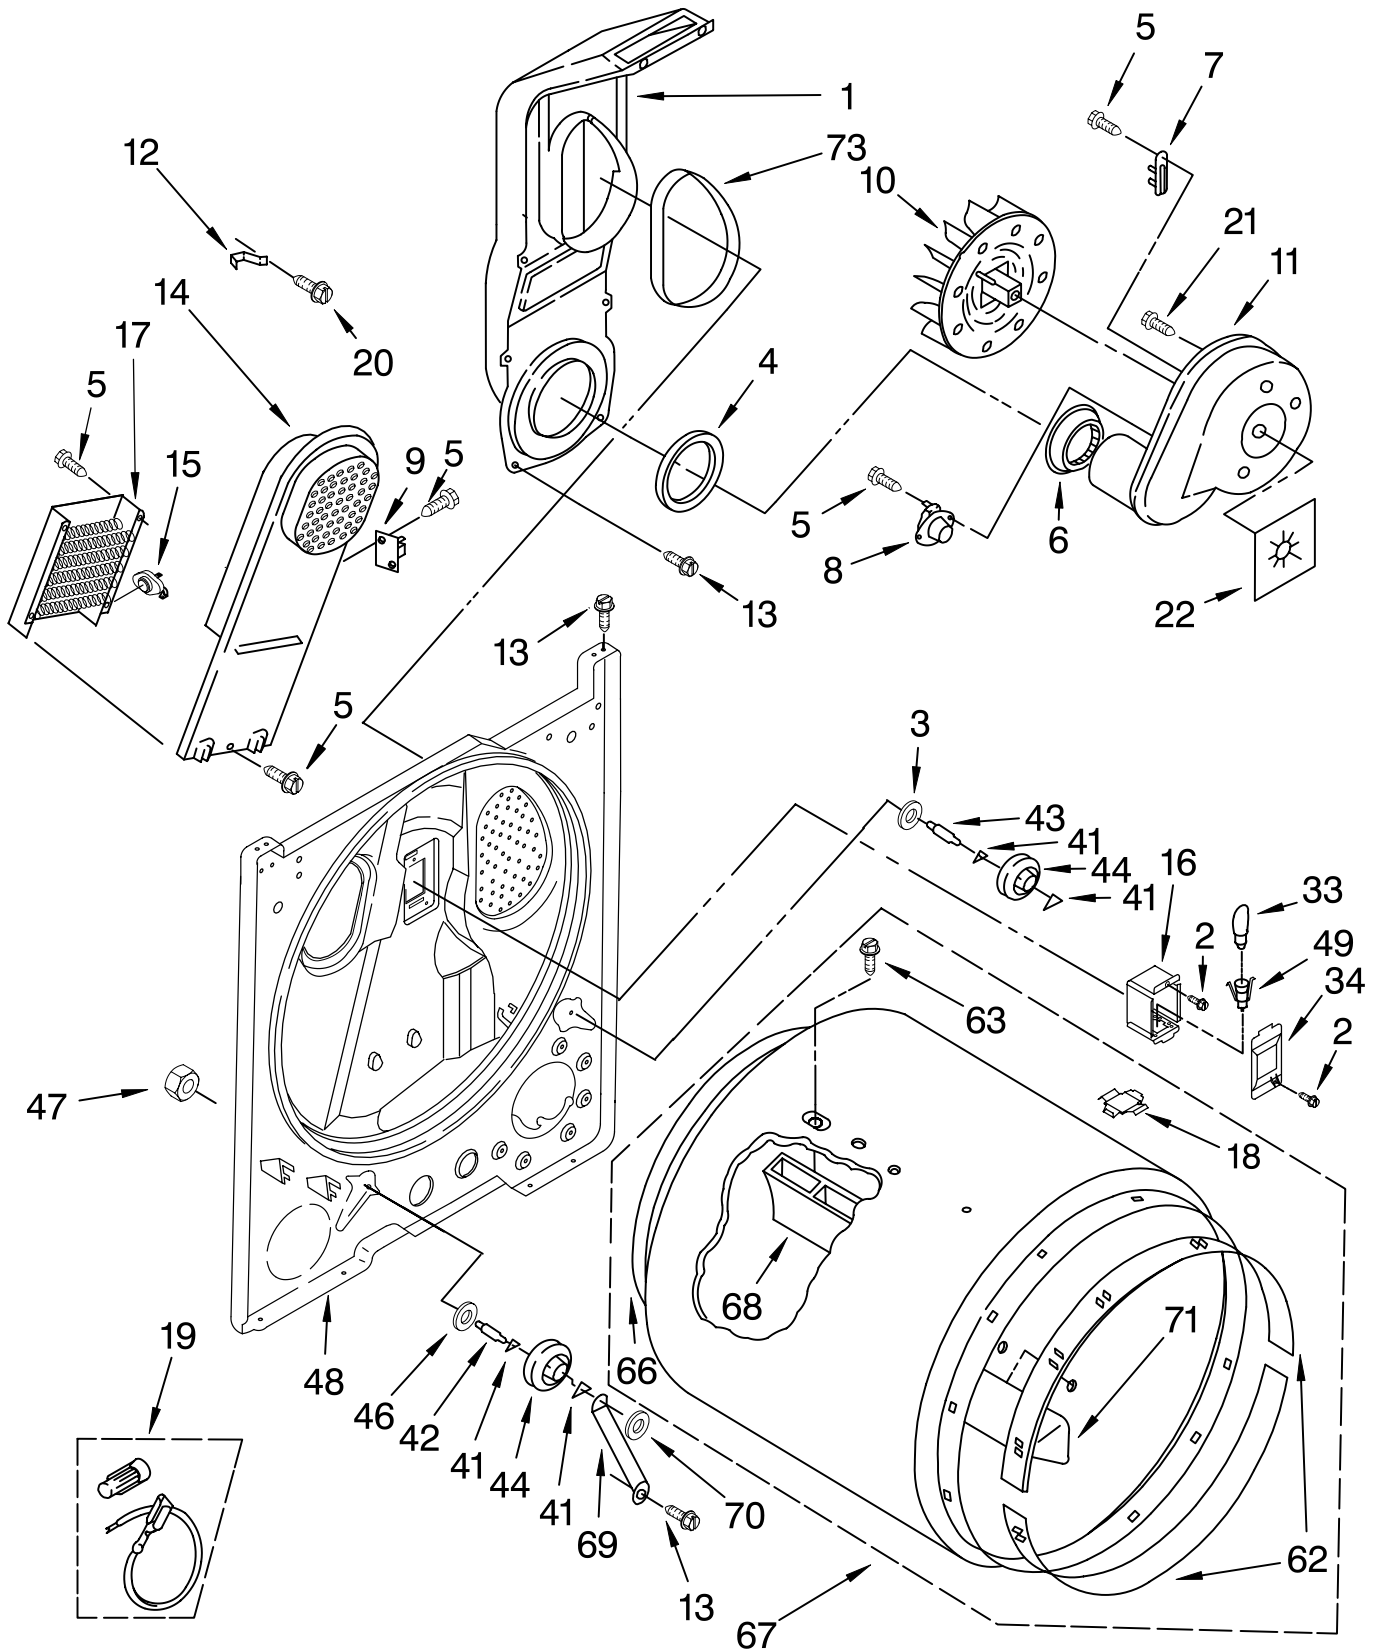

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: LER8648PW0, LER8648PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	487909	Screw, 8–15 x 1/2
3	3388703	Washer–Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8–18 x 3/8
6	696302	Shield, Exhaust
7	3392519	Thermal Fuse
8	3387134	Thermostat, Internal–Bias
9	3977393	Thermal Cut–Off (Includes Illus. 15)
10	694089	Wheel, Blower (Includes Illus. 22)
11	8557384	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10–16 x 1/2
14	8541818	Box, Heater
15	3977767	Thermostat, 221°F (105°C)
16	3977373	Bracket, Drum Light
17	3403585	Element, Heater
18	8066086	Drum Hole Plug
19	279457	Wire Kit, Terminal (For Heater Element Wiring Harness Repair)
20	489463	Screw, 8–18 x 5/8
21	3390647	Screw, 8–18 x 1/2
22	3394196	Seal, Blower
33	3406124	Bulb
34	3402841	Lens, Drum Light
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8–16
48	3403413	Bulkhead
49	3403634	Socket Assembly
62	692526	Ring, Bearing (2)
63	97787	Screw, 11–16 x 3/4
66	3406130	Seal, Rear Drum
67	695587	Drum Assembly
68	692490	Baffle, Drum (2)
69	3976434	Bracket, Support
70	90296	Clip
71	3403636	Baffle, Drum (1)
73	339956	Seal

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST